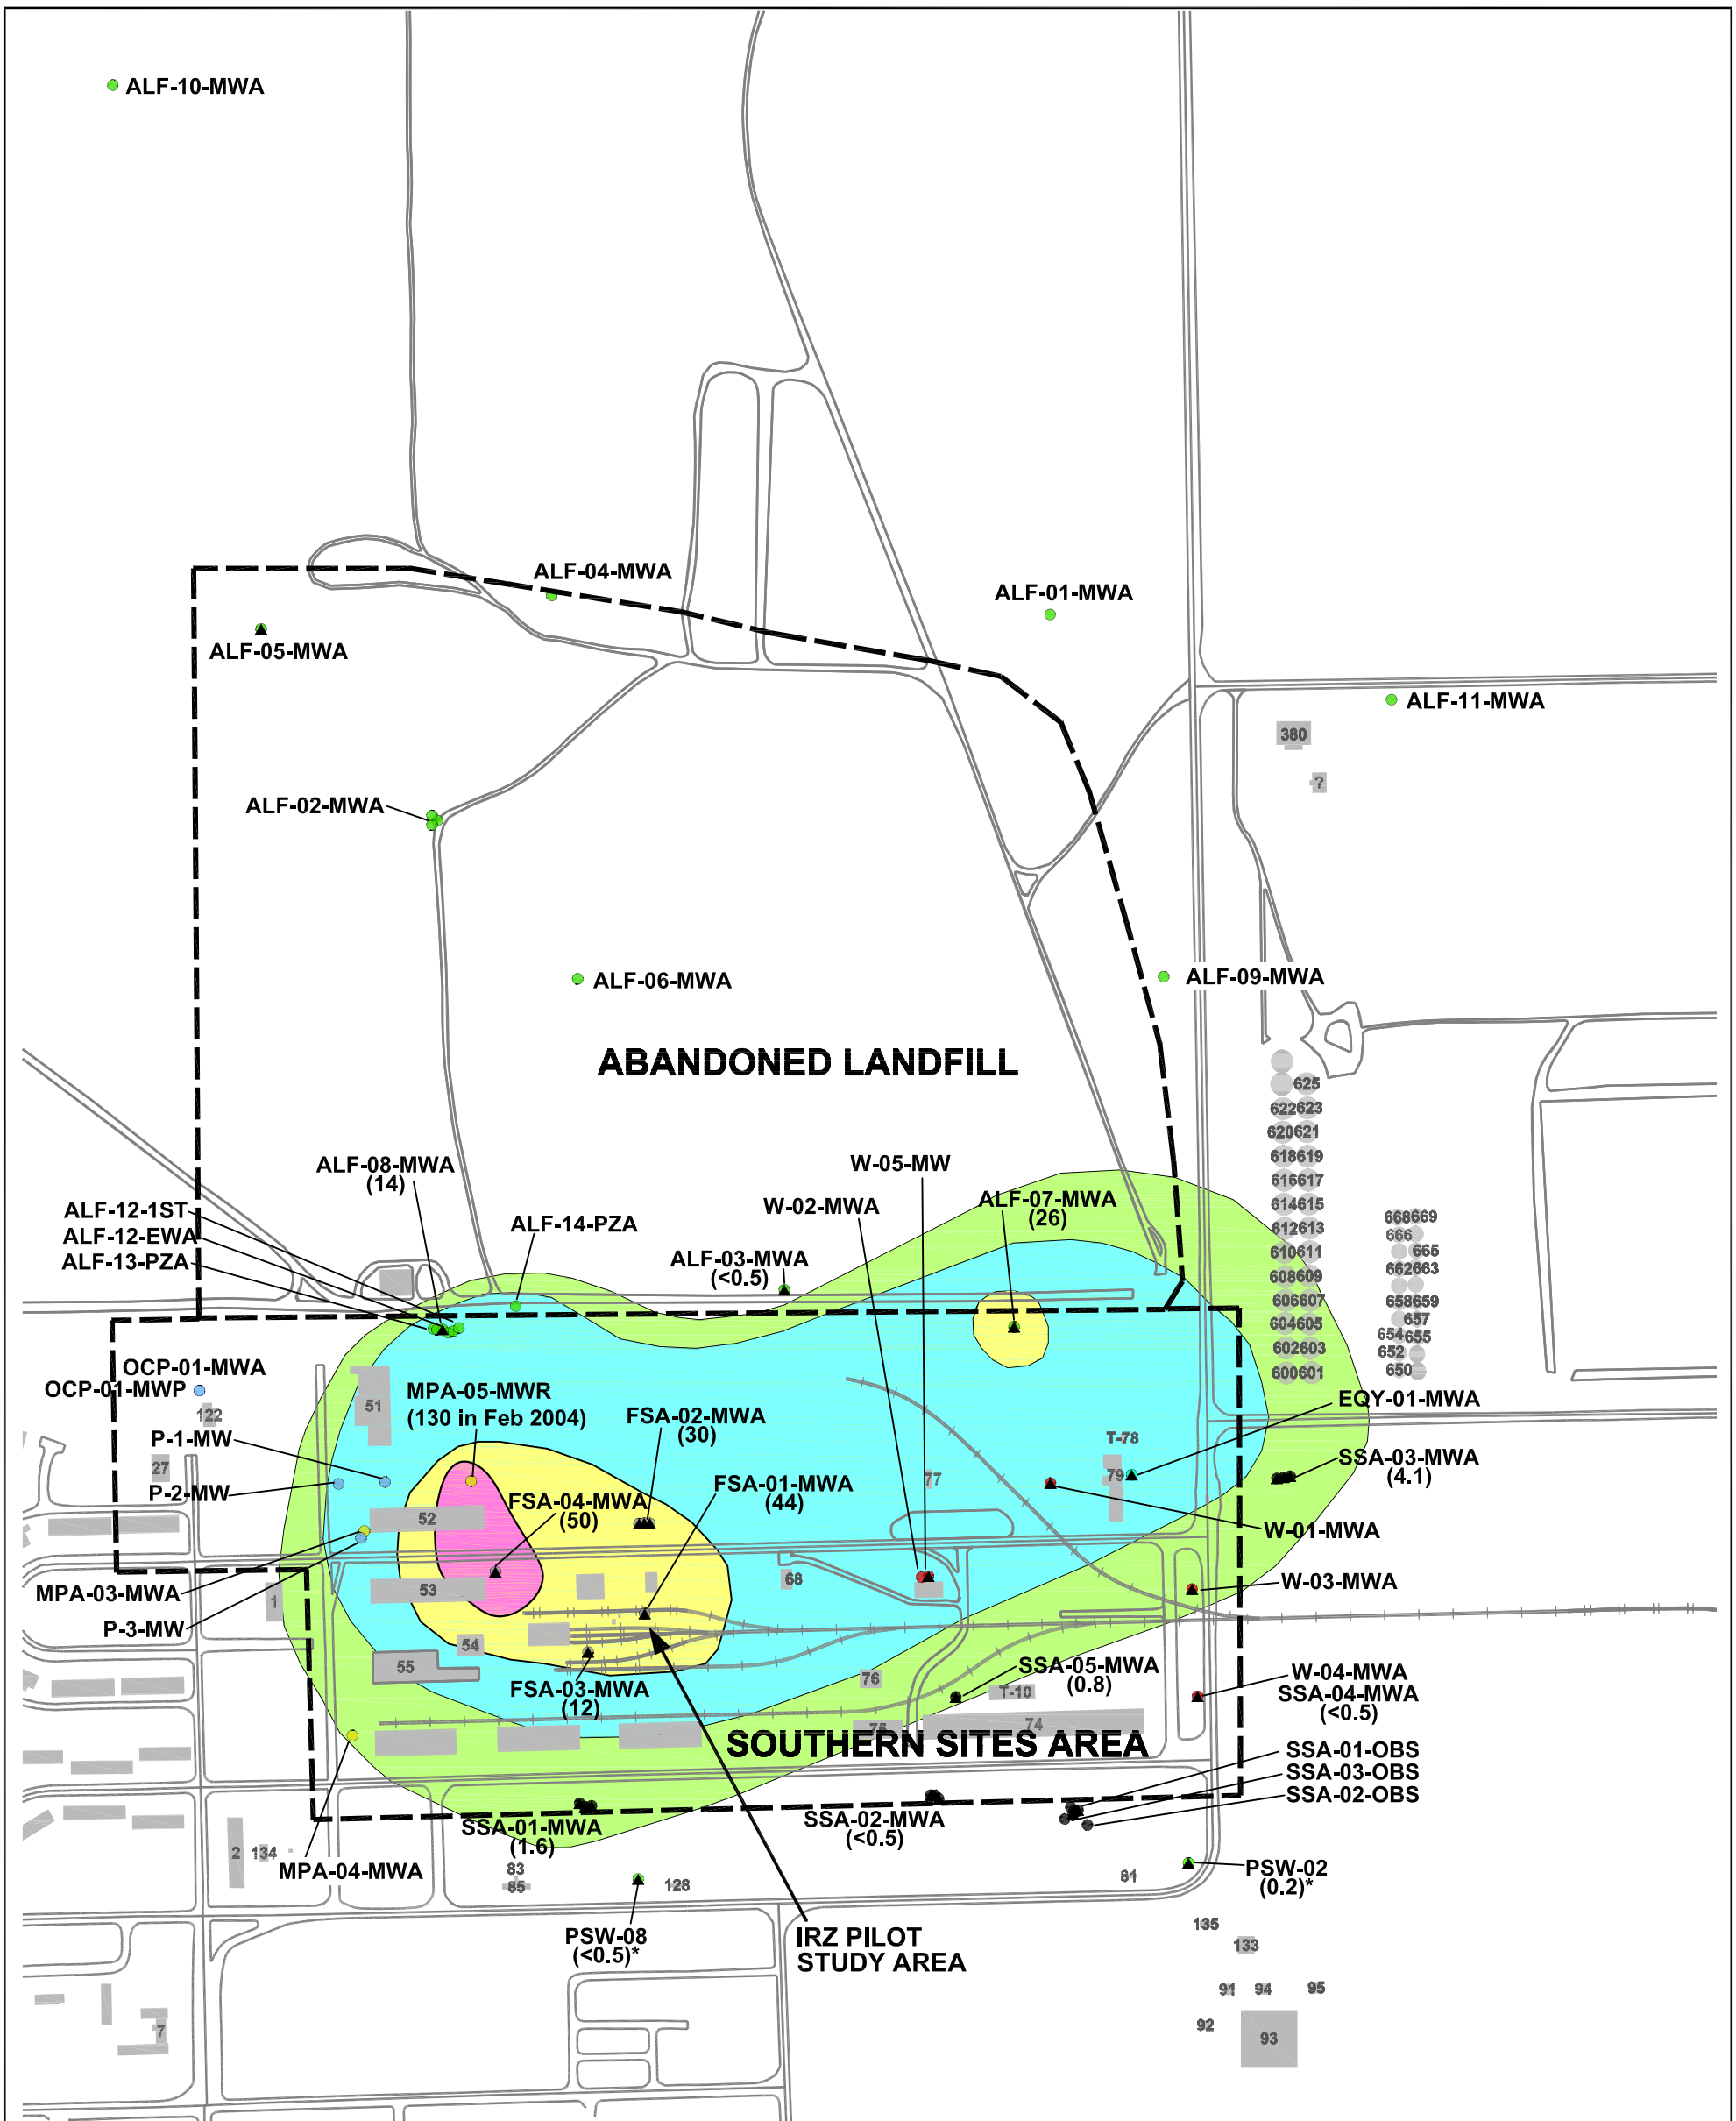

Explanation

- Road
- Railroad

TCE Concentrations

- 1-5
- 5-19
- 20-49
- >50
- Building
- Abandoned Landfill/Southern Sites Area Boundary

Well

- ALF
- EQY
- FSA
- MPA
- OCP
- P (Perched Zone)
- PSW
- SSA
- W
- TCE Values (ug/l)

N

0 200 400 800 Feet

NS = Not sampled
* = Not used for contouring

NOTE: Values from October 2003 and other historical data were used to create this interpretation of the plume.

ARCADIS

Prepared for:

Sierra Army Depot
Herlong, California

Figure 3.14

A-Zone TCE Isoconcentration Map (April 2004)
Abandoned Landfill and Southern Sites Areas